



3934 Santa Nella Place, San Diego, CA 92130 USA
Phone/Fax: 858-792-6168 E-mail: tech@skykingproducts.com

2003-onward Triumph Daytona 600

Item 626: License Plate Relocation Assembly

Installation Instructions

Parts List:

One SkykingProducts.com License Plate Holder
Two 5mm Fast Nuts

Tools and Materials:


Eye Protection; Rear Stand; socket set; combination wrench set; Socket (Allen) head set; Phillips Head Screwdriver; Pliers, Loctite. Place towel or rag over rear tire/rear mudguard and exhaust pipe to help in the clean up process later.

Precautions:

Use a rear stand as a minimum during installation. Wear protective eyewear while cutting the under tray.

Fender Eliminator installation steps:


1. Remove the seat (5mm Socket Head (SH)) and disconnect the black negative lead from the battery (Phillips Head Screwdriver (PHS)).

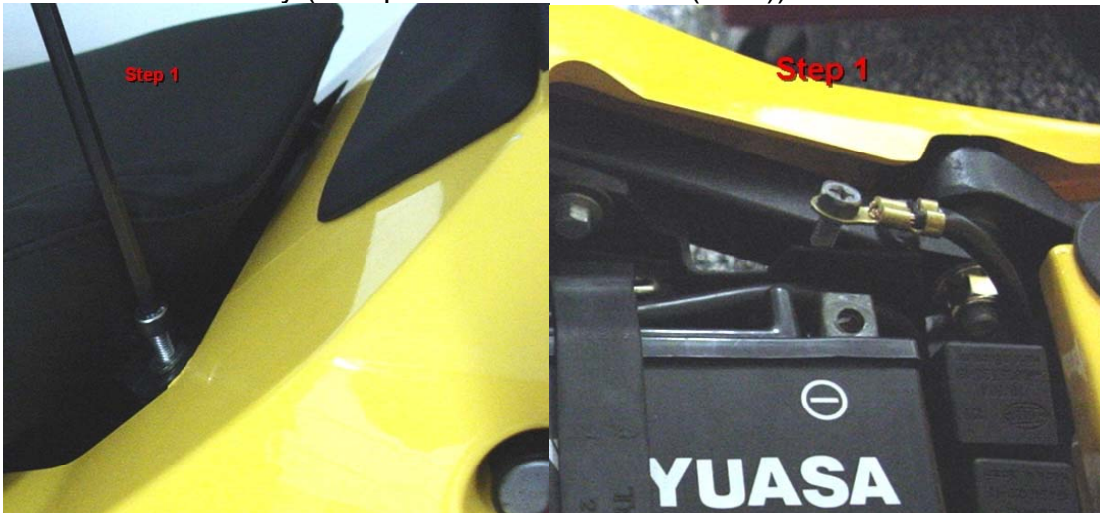

2. Remove passenger seat or seat cowl.




3. Remove the tail section body panel (5mm SH & PHS). Note: Remove seat cowl key assembly as well.

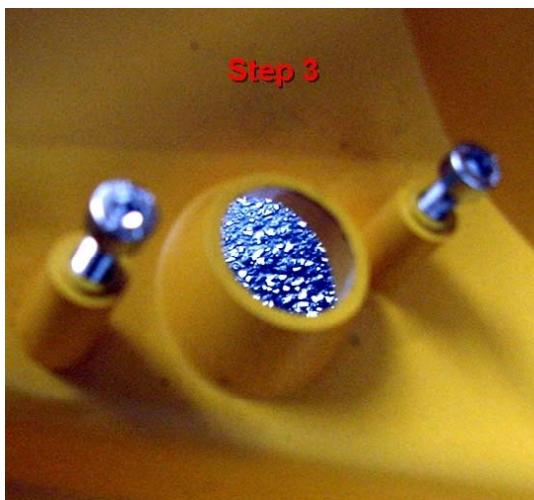

4. Remove brake light assembly (5mm SH) and then place forward out of the way. Note: No need to disconnect wiring.



5. Remove both turn indicators (5mm SH & 10mm wrench (W)).

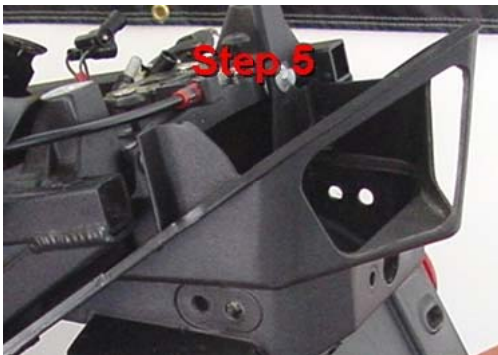

6. Remove license plate light assembly (8mm W).





7. Detach license plate bulb assembly from license plate light assembly. Just pull straight out.
8. Prior to proceeding with step 9 make certain you have eye protection for safety sake.
9. Cut off the under tray portion that currently hold the license plate. Take your time measure twice before making the cut. Sand cutting surfaces smooth all places.





10. Place license plate light assembly with the Skyking License Plate Holder.

11. Install 5mm fast nuts and press flush using pliers.





12. Install the license plate light assembly/Skyking License Plate Holder/5mm fast nuts that you just accomplished in steps 10 and 11 though two existing holes in the under tray. There is no need to drill any holes.



13. Install the two nuts that were removed during step 6 above and tighten (Apply one drop of Locktite per nut). Install light bulb assembly in place.
14. Install turn indicators that were removed during step 5 above and tighten. Reconnect push terminals.
15. Install Brake Light Assembly that was removed during step 4 above and tighten.
16. Connect the black negative lead from the battery that you disconnected in step 1 above (PHS), turn on ignition and perform license light, brake and turn indicator functional test.
17. Disconnect the black negative lead one last time from the battery.
18. Double check all fasteners used from steps 11 through 14 are secure before proceeding any further.
19. Install seat cowl key assembly to tail section body Panel that was removed in step 3 above.
20. Install tail section body panel (5mm SH & PHS) that was removed in step 3 above to the sub-frame.
21. Install passenger seat or seat cowl that was removed in step 2.
22. Connect black negative lead from the battery that was removed in step 17.
Note: This is a great time to apply Petroleum Jelly or Dielectric grease to Positive and Negative Battery terminals.



23. Install the seat that was removed in step 1.

24. Clean up, perform electrical final check out of License Light, Brake Light; Turn Indicators. Double check and make certain all fasteners are secure. Take a short test drive and double-check your work.

WARRANTY AND REMEDY:

Skyking hereby warrants that at the time of delivery thereof the parts bought will be free from defects in material and workmanship and will conform to the requirements of the order. Skyking assumes no liability for faulty or improper installation or use. All claims under this warranty must be made in writing to Skyking. Upon receipt of authorization from Skyking, the parts claimed to defective or non-conforming must be returned freight prepaid, to Skyking. Skyking will repair, or its option, replace any defective or non conforming parts and will return the repaired part or its replacement without charge. The failure to give Skyking written notice of any claim hereunder within the warranty period shall constitute a waiver of all claims hereunder. The foregoing states Skyking's remedy for any breach of warranty and for any claim whether sounding in contract or tort, based upon any defect in Skyking's parts. This warranty does not extend to the parts that have been altered or repaired nor does it extend to parts that has been subjected to misuse, neglect, accident, or improper installation. Skyking shall not, in any event, be liable for any incidental or consequential damages nor for any other damages more than the purchase price for the part. By accepting and or installing this item you fully agree to the terms and conditions of the warranty. THE FOREGOING WARRANTIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, WRITTEN, ORAL, OR IMPLIED, INCLUDING WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.